


# FDM MAGNETOMETER

digital lines from NI USB-6008

analog signal to narrow bw  
high gain amplifier

polarize ps  
(only using  
red & blk)

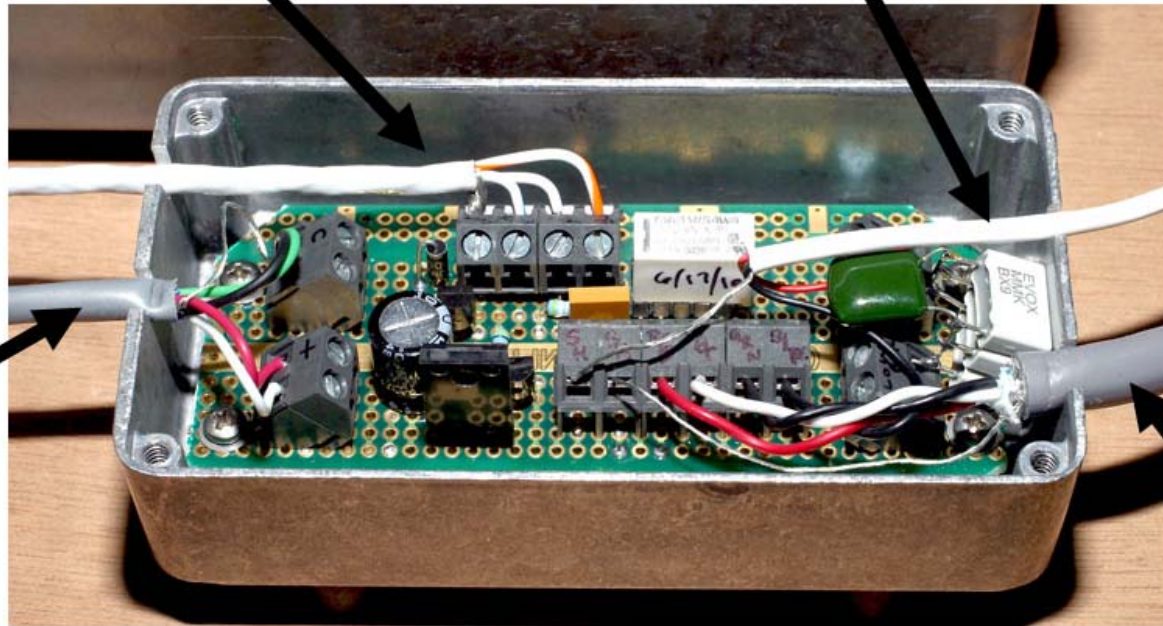

cable  
to sensor

## ZERO CURRENT SWITCHING FET-RELAY HYBRID POLARIZATION BOARD PROTOTYPE